


# SSKFHB5161

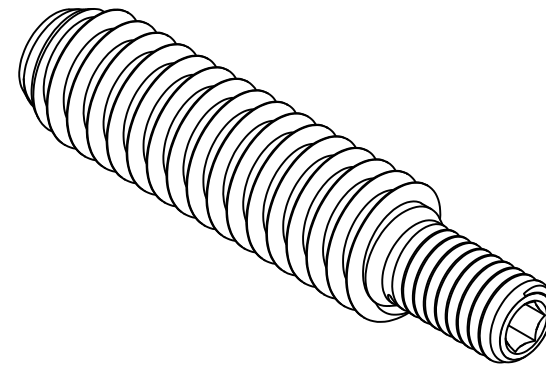

Typical View

Recommended pilot hole:

- On soft wood is 3/8"
- On hard wood is 7/16"