

Installation Guide


Steps to Install Plastic Insert (PTINSERT)

For 1/2" Square Tubular Balusters



Option 1:

Install a double screw on the floor and insert PTINSERT into the baluster. Then, put the insert on top of the screw and turn to secure.

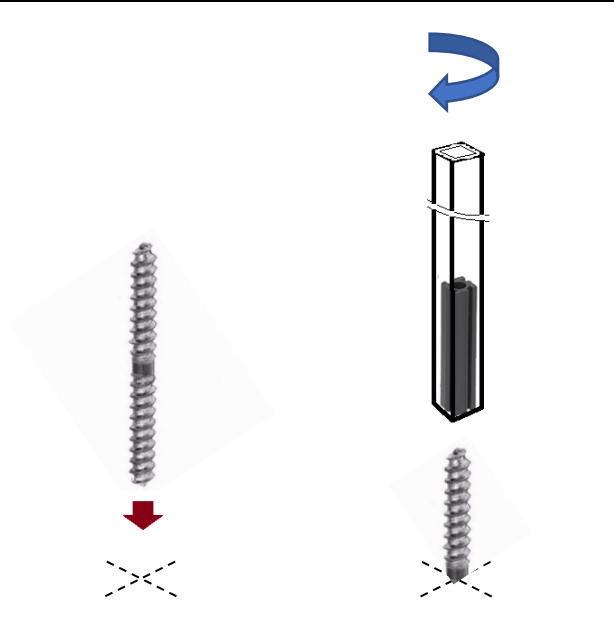

Option 2:

Cut PTINSERT in half and install it by using a 3/16" x 2" screw. Then, hammer the baluster on top of secured PTINSERT.

NOTE:

Use 2 pieces of insert to secure rectangular balusters.

