

# INSTALLATION METHODS


## TO INSTALL 1/2" AND 5/8" SQUARE TUBULAR BALUSTERS

### APPLICABLE FOR TOP AND BOTTOM

#### TOP:


1.

Push the insert into the baluster.

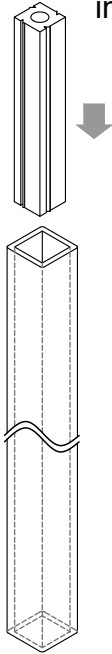

2.



Secure the baluster by wood screw #14 x 1 1/2".

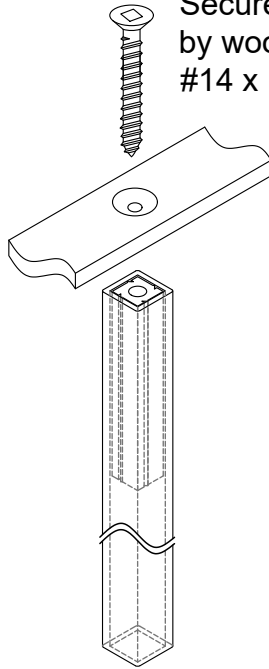

#### PART NUMBERS:

PTINSERT FOR 1/2"

PTINSERT58 FOR 5/8"

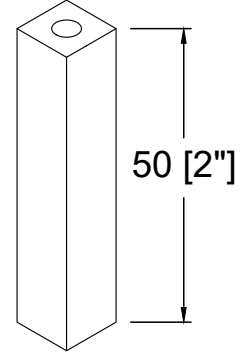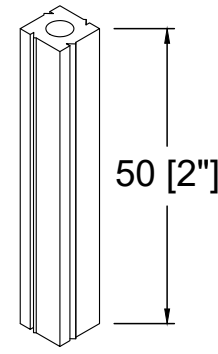


PTINSERT

PTINSERT58


#### BOTTOM OPTION - A

1.

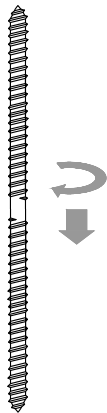


Install a 1/4" x 2" dowel screw on the floor.

2.

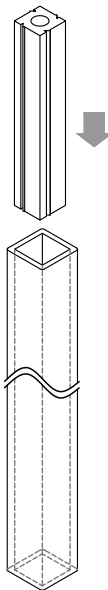

Push the insert into the baluster.

3.

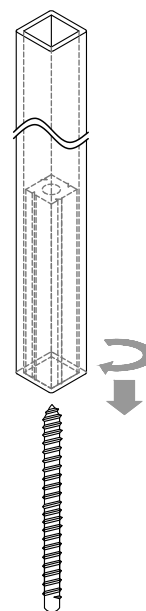

Put the insert on top of the screw and turn to secure.

4.




Done!

# INSTALLATION METHODS

## TO INSTALL 1/2" AND 5/8" SQUARE TUBULAR BALUSTERS


### BOTTOM OPTION - B

1.

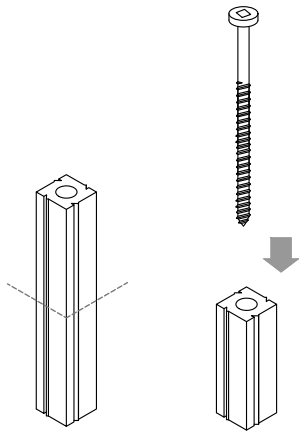

Cut the insert in half and secure the insert by screw #10 x 2" on the floor.

2.

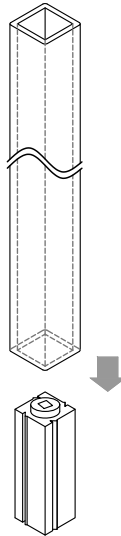

Hammer the baluster over the insert.

3.




Done!

### NOTE 1:

Inserts needs to be cut at a proper angle to install on a stringer.

### NOTE 2:

Use 2 pieces of insert to secure rectangular balusters.

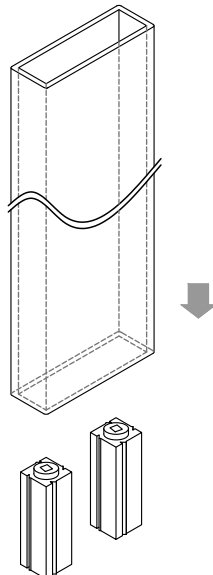

### NOTE 3:

Add a shoe if you like.  
Suits all shoes.

