
Installation Instructions for Series 200 Soft Close Hinge


Glass to Glass 180° Soft Close Hinge - #SSPFH200G_



STEP 1A: Through Holes

- 1. Align the gate panel with the hinge panel.
- 2. Remove binding plates and insert hinges through the holes.
- 3. Use arched packers to adjust for any gaps or misalignments.
- 4. Secure binding plates once the hinges are properly positioned.

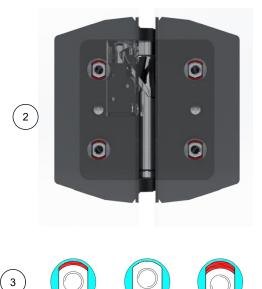

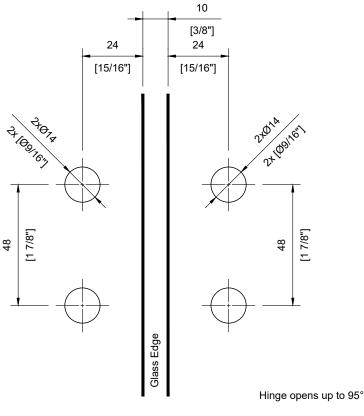


Hole in the Glass

STEP 1B: Through Cutouts

- 1. Align gate panel with hinge panel.
- 2. Use cutout adaptors and flat packers to fill gaps and adjust height.
- 3. Secure binding plates and tighten the sliding block using the customized Allen key.
- 4. Hinges must be installed along the same axis to function correctly and ensure durability.



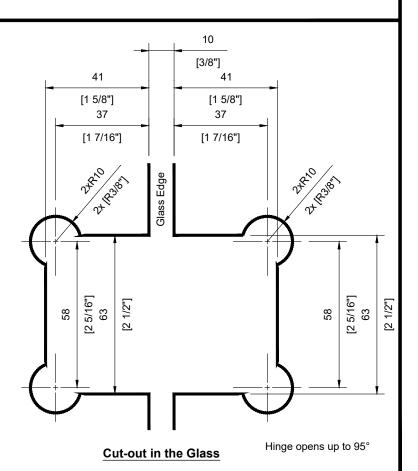


Installation Instructions for Series 200 Soft Close Hinge

Glass to Glass 180° Soft Close Hinge - #SSPFH200G_





- Insert an Allen key into the adjustment slot.
- Turn clockwise to increase tension or counterclockwise to decrease.
- Start with a tension setting of 4, adjusting both hinges simultaneously.
- A built-in spring protection mechanism prevents over-tensioning beyond level 7.

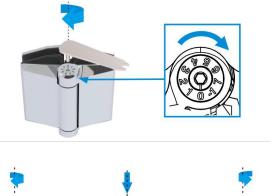



Step 4: Safety Cap Installation

- If hinge spacing is less than 1200mm [47 1/4"], a safety cap must be installed to prevent climbing.
- Check with local pool fencing by-law for more specific details.

STEP 3: Adjusting Damper Stroke

- Turn the adjustment screw clockwise to increase closing speed.
- Turn counterclockwise to slow down closing speed.
- This mechanism is for fine-tuning only; major adjustments should be made using the spring tension setting.

Use Allen Key No. 2.



Step 5: Proper Fastening and Cleaning

- Avoid excessive torque when fastening screws to prevent damage.
- For black finishes, do not use acidic or alkaline cleaning agents to prevent surface degradation.
- Regularly check for alignment and tighten screws as needed.

